


- Refer to EC-101 for Special Ditch Control (Wood Excelsior Mat).
- ① Install anchor slot at the beginning (upstream end) of all mat installations.
 - ② Place staples alternately in rows approximately 24 inches apart. Approximately 30 staples required per square (100 sq. ft.) of each type of mat.
 - ③ Stagger Junction Slots.

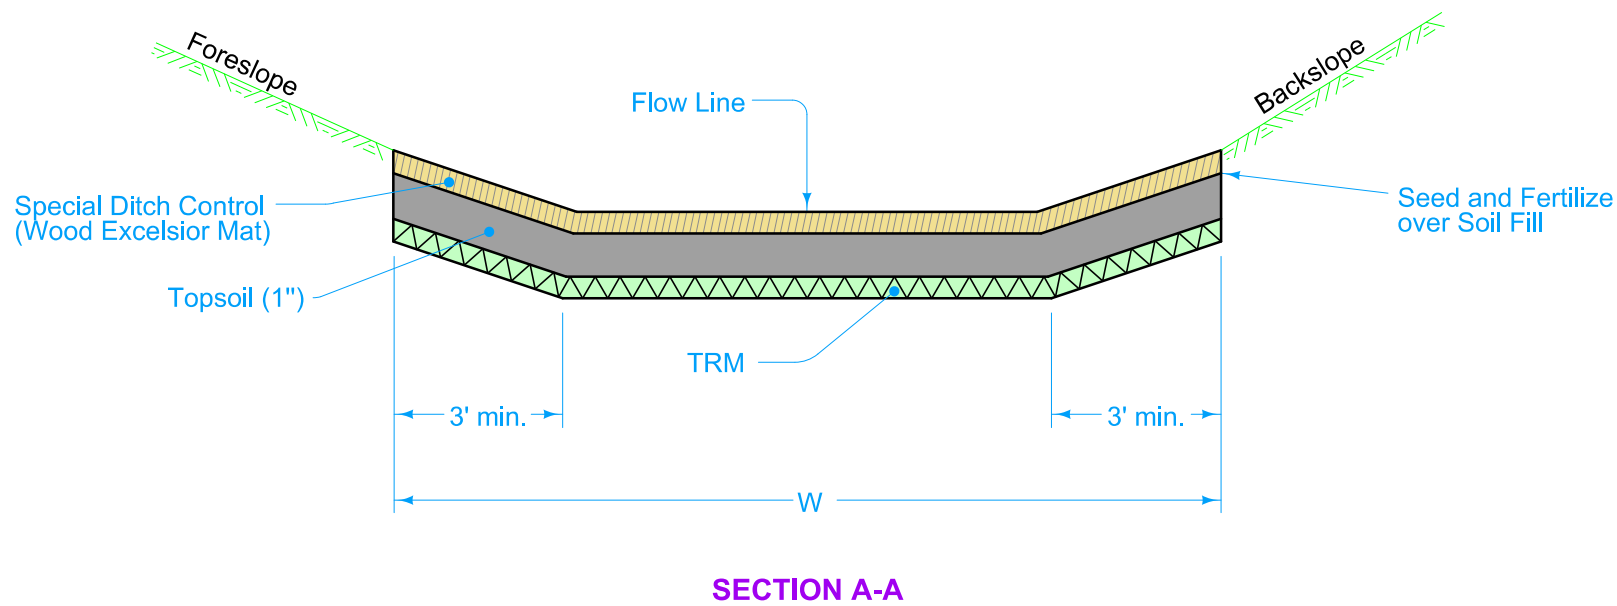



TRM

Wood Excesior Mat

Possible Contract Items:
Turf Reinforcement Mat

Possible Tabulation:
100-22

 IOWA DOT	REVISION		
	New	04-17-18	
	EC-104		
STANDARD ROAD PLAN			
		SHEET 1 of 1	
REVISIONS: Added Designer Info button.			
			
APPROVED BY DESIGN METHODS ENGINEER			
TURF REINFORCEMENT MAT (TRM)			