

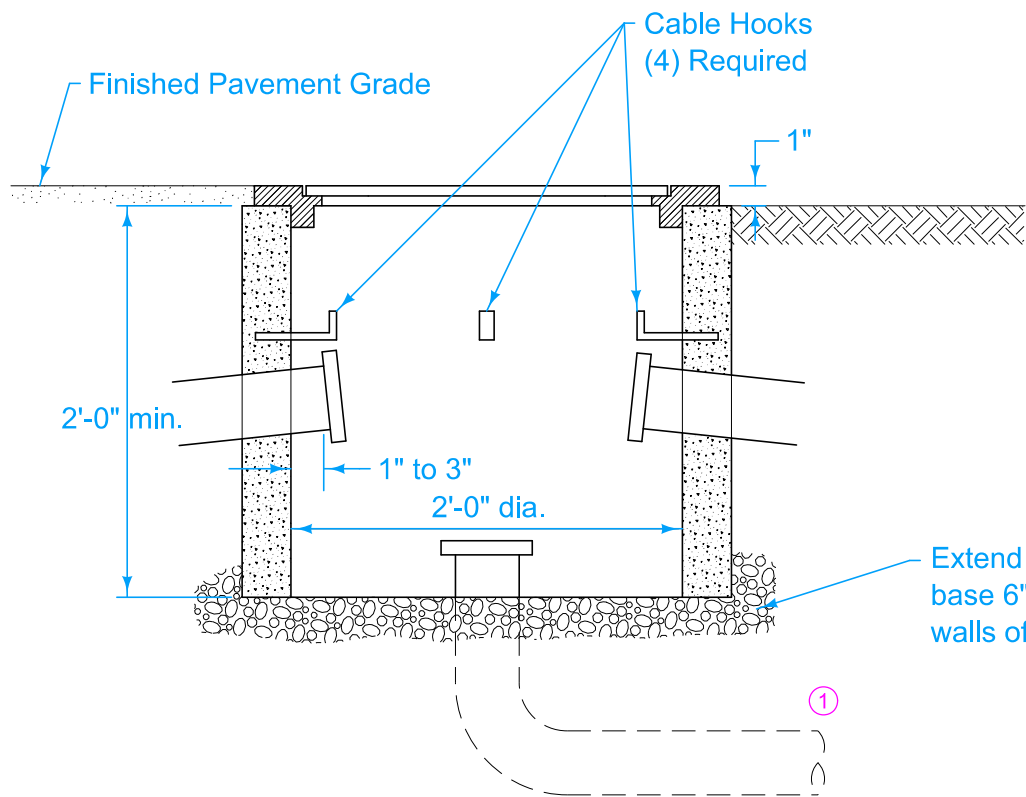
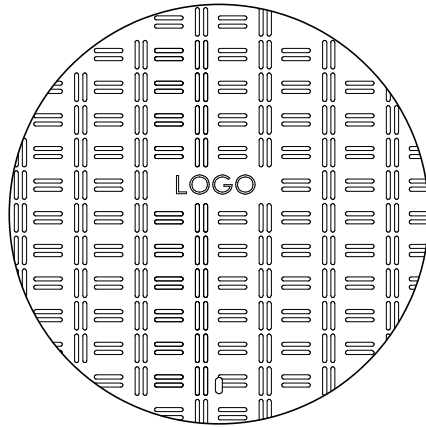



① Potential conduit entry through bottom of handhole.


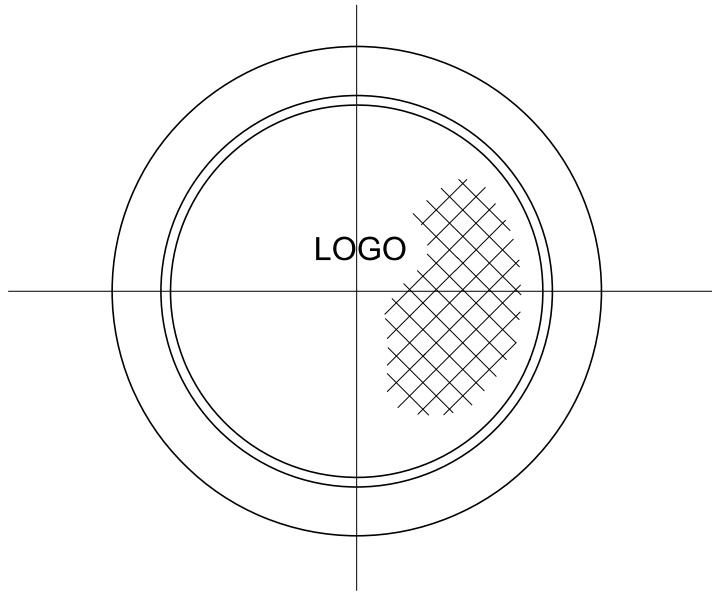


PRECAST CONCRETE HANDHOLE (TYPE I)

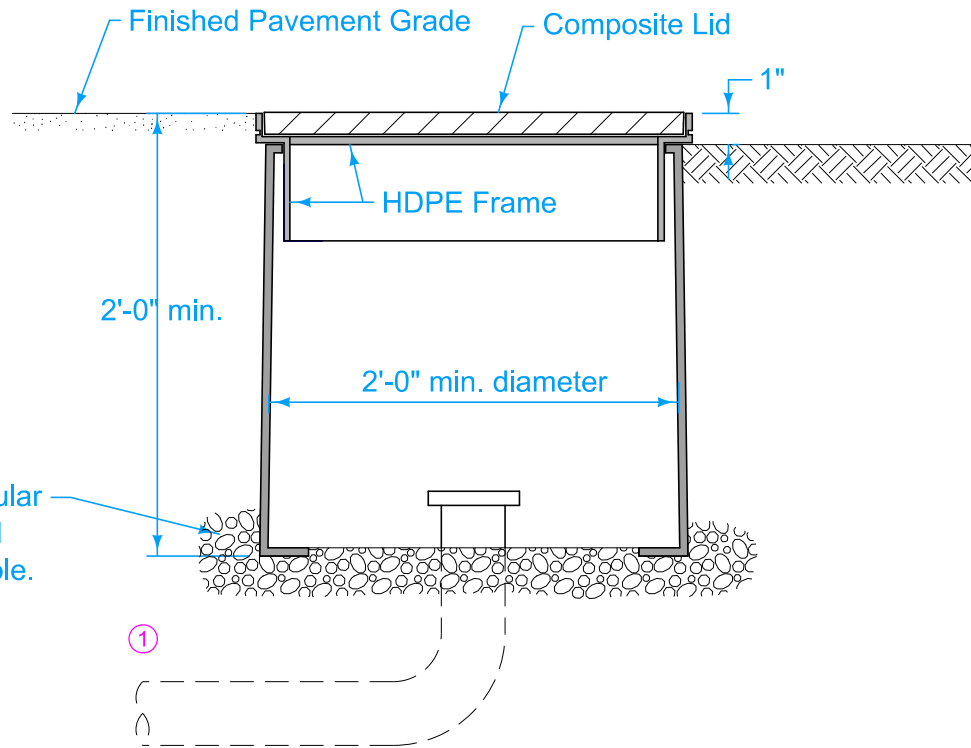


HDPE HANDHOLE (TYPE V)

		REVISION	
		3	10-21-25
FIGURE 8010.103	STANDARD ROAD PLAN	LI-103	
		SHEET 1 of 2	
REVISIONS: Updated Sudas and IDOT Logos.			
			
SUDAS DIRECTOR		DESIGN METHODS ENGINEER	
CONDUIT AND PRECAST HANDHOLES			

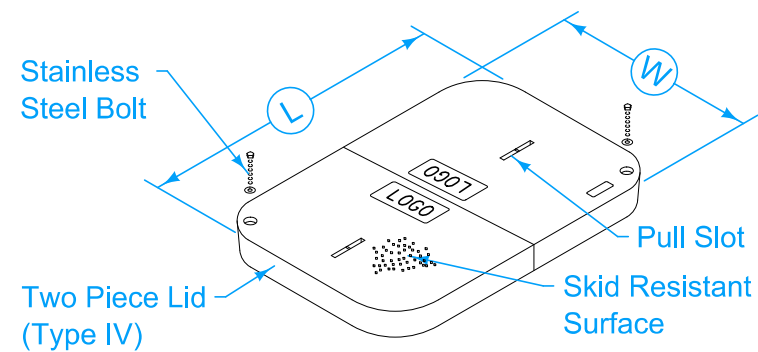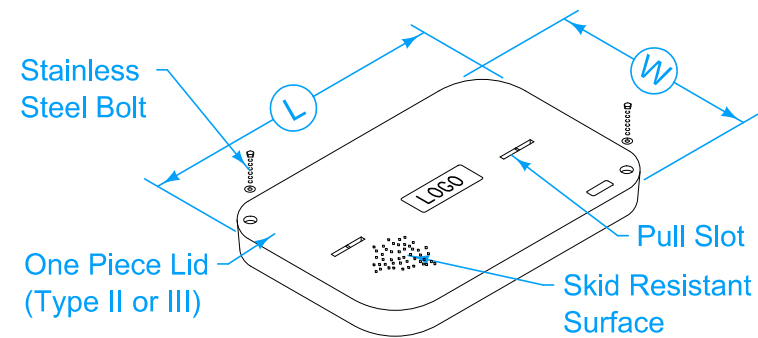


HANDHOLE DIMENSIONS TABLE (NOMINAL)			
TYPE	Ⓛ	Ⓦ	ⓓ
II	30"	17"	24"
III	36"	24"	30"
IV	48"	30"	36"

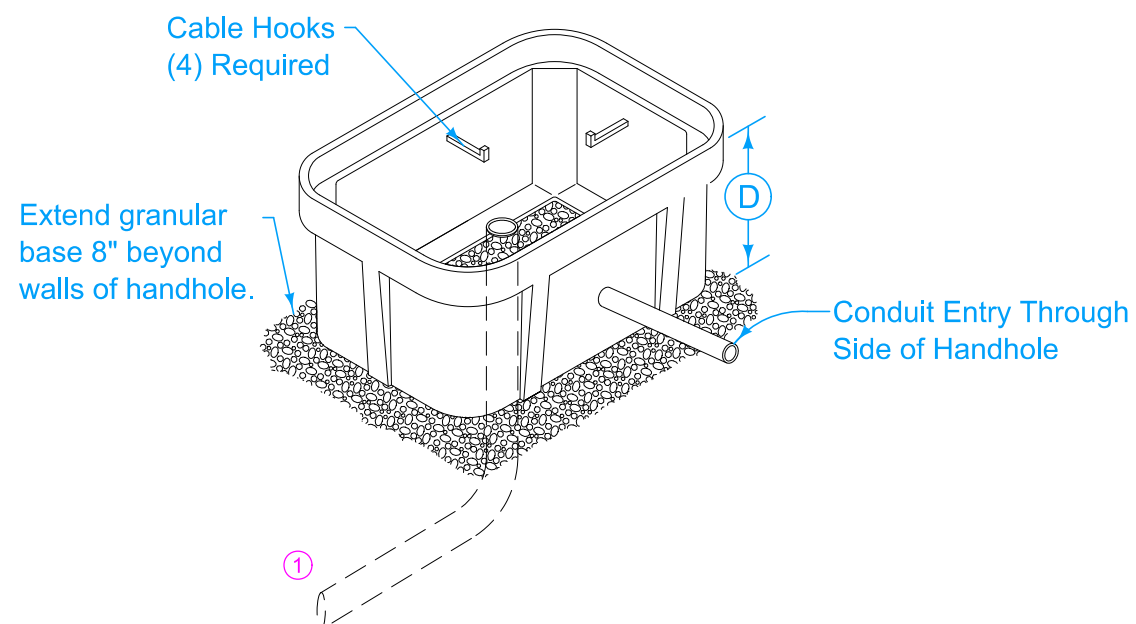

PRECAST CONCRETE COMPOSITE HANDHOLE

- ① Potential conduit entry through bottom of handhole.
- ② For conduit behind curb, place 24 to 48 inches below top of curb. For conduit under roadway, place 30 to 60 inches below the gutterline.

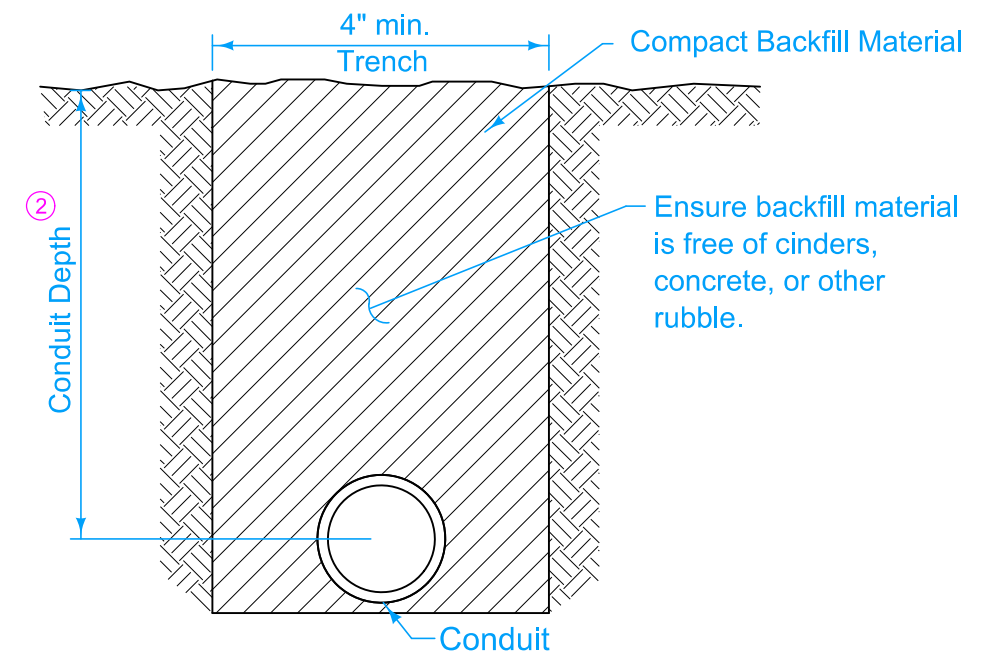

CONDUIT IN TRENCH

		REVISION	
		3	10-21-25
		LI-103	
		SHEET 2 of 2	
FIGURE 8010.103	STANDARD ROAD PLAN		

REVISIONS: Updated Sudas and IDOT Logos.

[Signature]
SUDAS DIRECTOR

[Signature]
DESIGN METHODS ENGINEER

CONDUIT AND PRECAST HANDHOLES