
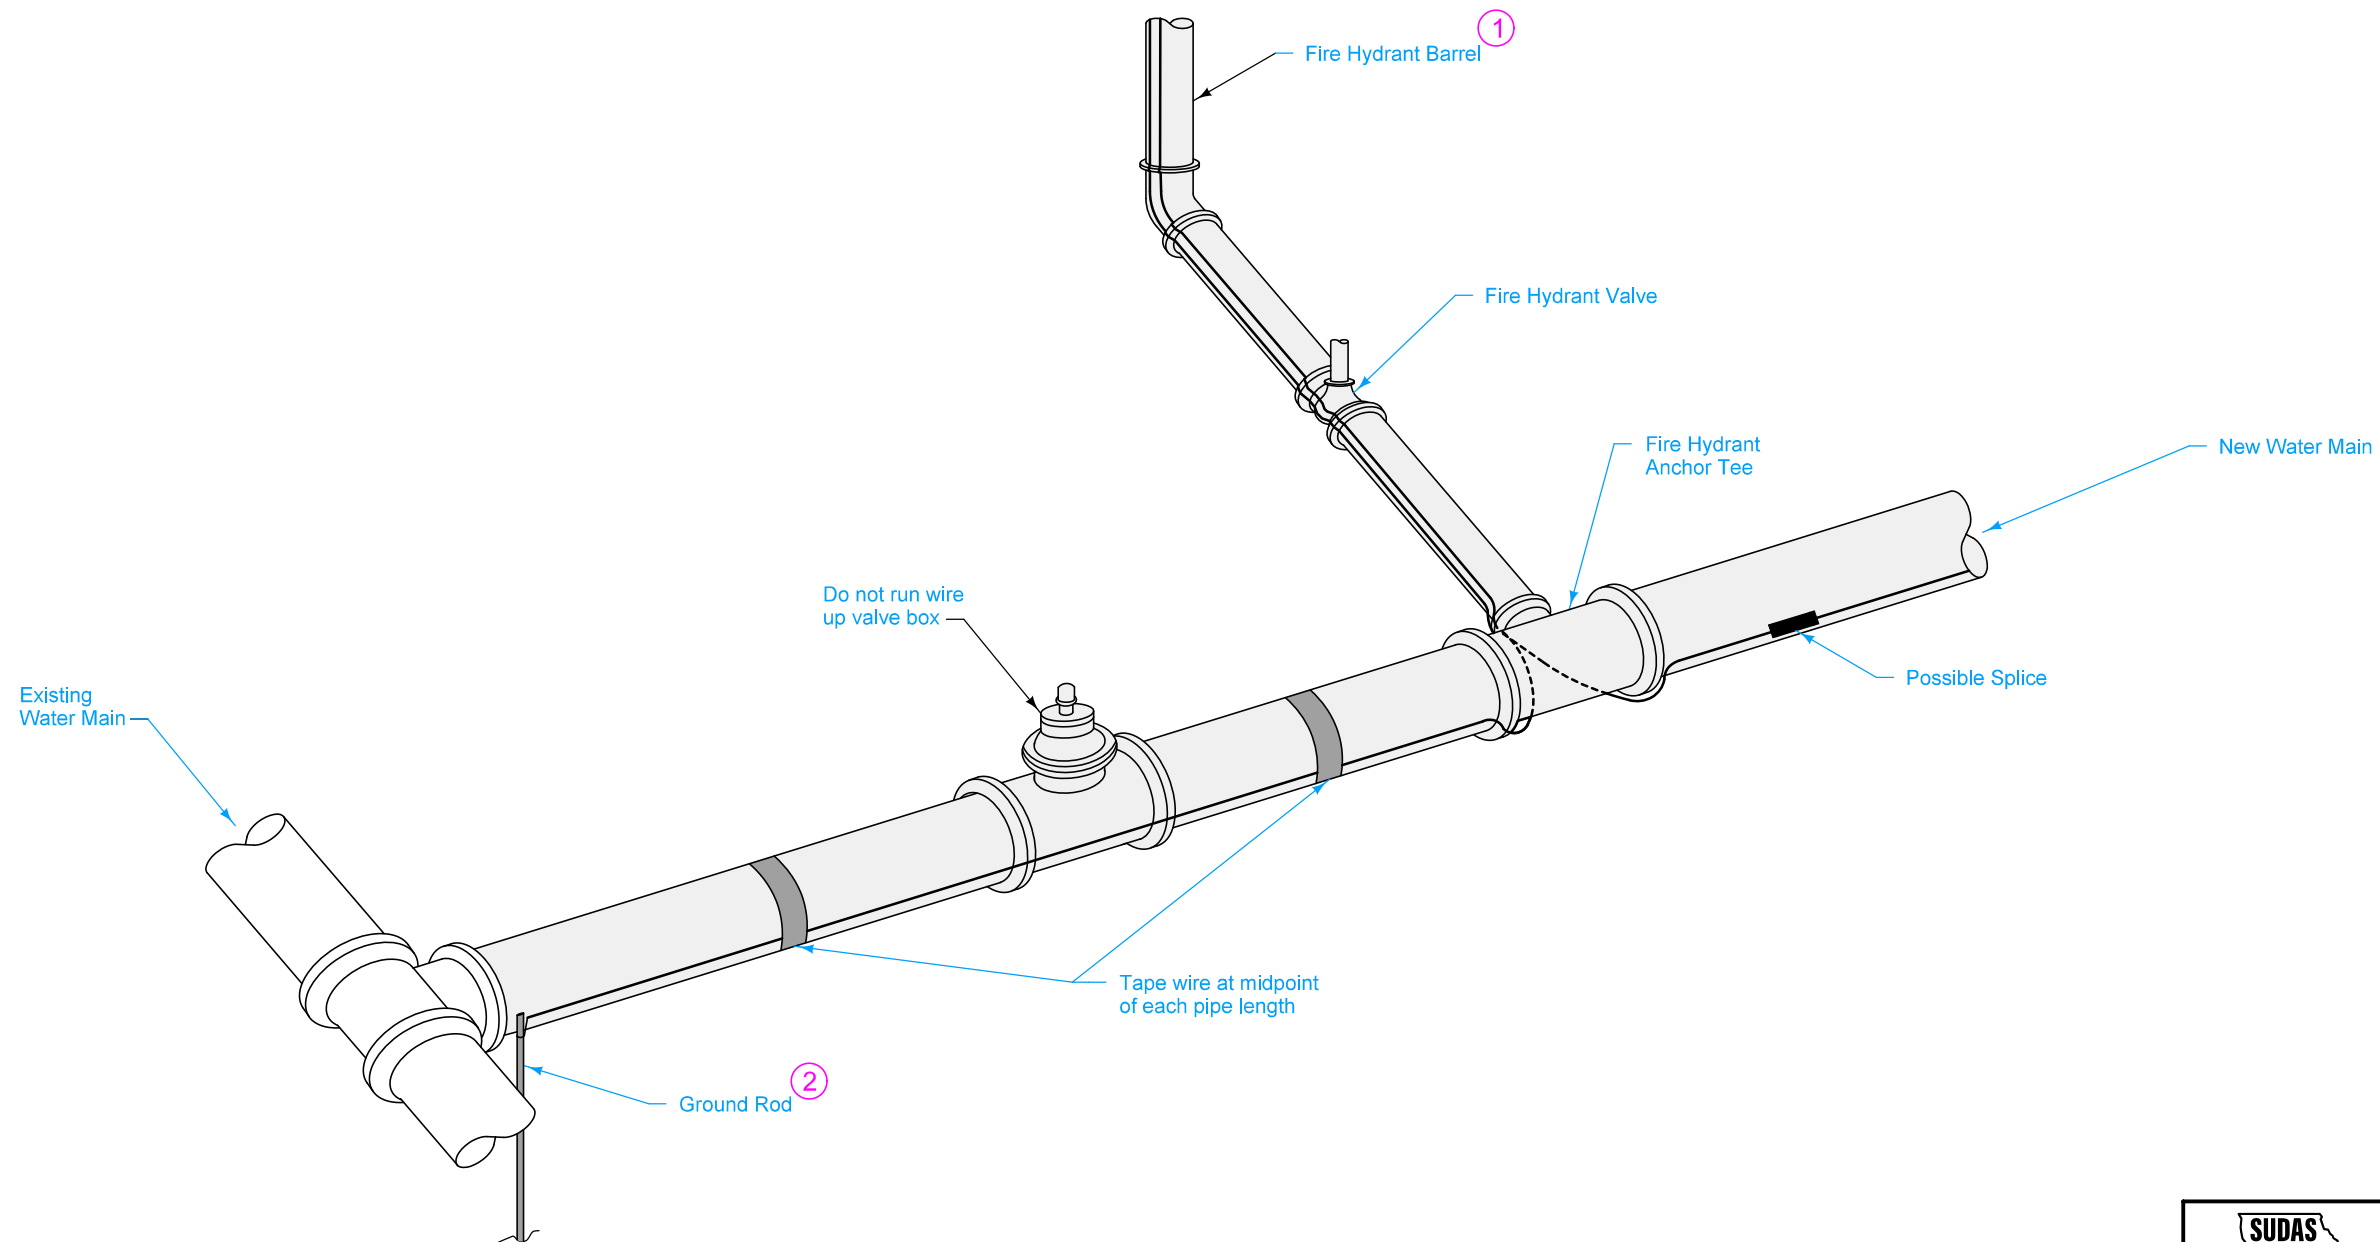


- ① Extend tracer wire up fire hydrant barrel to internal terminals of tracer wire station and back down. Refer to WM-201 for details of fire hydrant assembly.
- ② Clamp tracer wire to ground rod at system termination points.

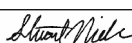

TYPICAL INSTALLATION

		REVISION		
		2	10-21-25	
		WM-102		
FIGURE 5010.102		STANDARD ROAD PLAN		
		SHEET 1 of 1		
REVISIONS: Updated Sudas and IDOT Logos.				
 SUDAS DIRECTOR		 DESIGN METHODS ENGINEER		
TRACER SYSTEM				